

## Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

It is also possible to customize certain vehicle features yourself using the navigation screen.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

### Settings that can be customized at a dealer

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Smart access system with push-button start	On	Off
	Door unlock function	Driver's door	All the doors
			Each door
			Same side doors
Wireless remote control	Wireless remote control	On	Off
	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Time elapsed before automatic lock function is activated if door is not opened after being unlocked	60 seconds	Off
			30 seconds
			120 seconds
	Operational signal (emergency flashers)	On	Off
	Trunk unlocking operation	Push and hold	Push twice
			One short push
	Alarm (panic mode)	On	Off
Smart access system with push-button start and wireless remote control	Operation signal (emergency flashers)	On	Off
	Open door warning buzzer	On	Off

Customizing Your Lexus

Item	Function	Default setting	Customized setting
Door lock	Speed-detecting automatic door lock function	Off	On
	Opening driver's door unlocks all doors.	Off	On
	Shifting gears to "P" unlocks all doors.	On	Off
	Shifting gears to position other than "P" locks all doors.	On	Off
	Unlocking using a mechanical key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
Trunk	Power trunk opener and closer function	On	Off
Power easy access system	Driver's seat movement when exiting the vehicle	Full	Off Partial
	Steering wheel auto away and return function	On	Off
Power windows	One-touch close operation using the power window switches on the front passenger door and each rear door	On	Off
	One-touch front passenger window or rear window close operation using the power window switch on the driver's door	On	Off
	Mechanical key linked operation	Open and close	Off Open only Close only
	Wireless remote control linked operation	Off	On
	Linked entry function	On	Off

Item	Function	Default setting	Customized setting
Moon roof	Mechanical key linked operation	Open and close	Off
			Open only
			Close only
	Linked operation of components when mechanical key is used	Slide only	Tilt only
	Wireless remote control linked operation	Off	On
	Linked operation of components when wireless remote control is used	Slide only	Tilt only
	Linked entry function	On	Off
			Off
Turn signal lever	Times of flashing of the lane change signal flashers	3	5
			7
			9
			11
Automatic light control system	Light sensor sensitivity	Standard	-2 to 2
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds
			60 seconds
			90 seconds
Air conditioning system	Automatic high beam system	On	Off
	Switching between outside air and recirculated air mode linked to "AUTO" switch operation	Auto	Manual
	A/C auto switch operation	Auto	Manual
	Exhaust gas sensor sensitivity	Standard	-3 to 3
	Air conditioning control of Eco drive mode	On	Off
Lights	Daytime running light system (U.S.A. only)	On	Off
Intuitive parking assist	Buzzer volume	Level 3	Level 1 to 5
	Distance at which the front and back sensors detect an obstacle	Level 1	Level 2

## Customizing Your Lexus

Item	Function	Default setting	Customized setting
Illumination	Time elapsed before the interior lights turn off	15 seconds	Off
			7.5 seconds
			30 seconds
	Time elapsed before the exterior lights turn off	15 seconds	Off
			7.5 seconds
			30 seconds
	Sensitivity of the ambient light sensor used for dimming the meter lights etc.	Standard	-2 to 2
	Sensitivity of the ambient light sensor used for brightening the meter lights etc.	Standard	-2 to 2
	Operation when the doors are unlocked	On	Off
Seat belt reminder	Operation after the "ENGINE START STOP" switch is turned OFF	On	Off
	Footwell lighting	On	Off
	Shift lever lighting	On	Off
	Vehicle speed linked seat belt reminder buzzer	On	Off

### Settings that can be customized using the navigation system display

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Smart access system with push-button start	On	Off
	Door unlock function	Driver's door	All the doors
			Each door
			Same side doors

Item	Function	Default setting	Customized setting
Wireless remote control	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Time elapsed before automatic lock function is activated if door is not opened after being unlocked	60 seconds	Off
			30 seconds
			120 seconds
Smart access system with push-button start and wireless remote control	Operation signal (emergency flashers)	On	Off
Door lock	Speed-detecting automatic door lock function	Off	On
	Opening driver's door unlocks all doors.	Off	On
	Shifting gears to "P" unlocks all doors.	On	Off
	Shifting gears to position other than "P" locks all doors.	On	Off
	Unlocking using a mechanical key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
Power easy access system	Driver's seat movement when exiting the vehicle	Full	Off
			Partial
Turn signal lever	Times of flashing of the lane change signal flashers	3	Off
			5
			7
			9
			11

## Customizing Your Lexus

Item	Function	Default setting	Customized setting
Automatic light control system	Light sensor sensitivity	Standard	-2 to 2
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 second
			60 seconds
			90 seconds
Air conditioning system	Switching between outside air and recirculated air mode linked to "AUTO" switch operation	Auto	Manual
	A/C auto switch operation	Auto	Manual
	Exhaust gas sensor sensitivity	Standard	-3 to 3
Lights	Daytime running light system (U.S.A. only)	On	Off
Illumination	Time elapsed before the interior lights turn off	15 seconds	Off
			7.5 seconds
			30 seconds
	Time elapsed before the exterior lights turn off	15 seconds	Off
			7.5 seconds
			30 seconds
	Sensitivity of the ambient light sensor used for dimming the meter lights etc.	Standard	-2 to 2
	Sensitivity of the ambient light sensor used for brightening the meter lights etc.	Standard	-2 to 2

### Multi-information display

Country	Available languages
U.S.A.	English and Spanish
Canada	English, French, German, Spanish and Italian









### **Your Lexus dealer**

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### **■ U.S. OWNERS**

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### **■ CANADIAN OWNERS**

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)

- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)

- Canada : [www.lexus.ca](http://www.lexus.ca)

©2011 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.